

5. Childproof lid



6. Tank to Tank Connection

It is possible to connect two Helena Water Butts together.

Please use the 3P Tank to Tank connection Kit (25mm) Art-no 9000326



3P Helena 300L


Instruction Sheet



The Helena Water Butt is delivered with a full kit which includes a plastic high flow tap and hole saw.

We recommend using the optional 3P Filter Collector with Universal Long Link Kit for filling the Helena.



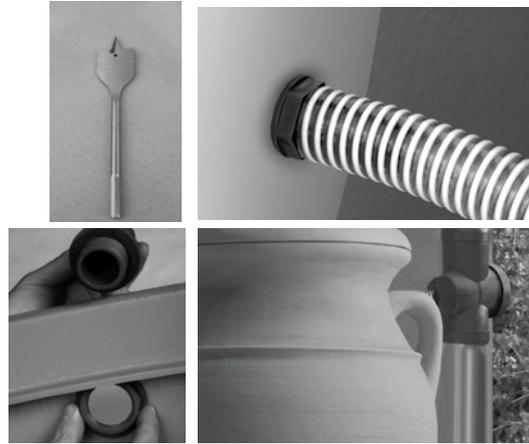

1. Setting up

Site the Helena on a firm level surface, adjacent to the downpipe.

Refer to your Filter Collector instructions or other rain diverter instructions. Connecting a tap is optional.

2. Fitting an (optional) 3P Filter Collector with Universal Link Kit

Marking Out

Measure down 90 mm from the lip of the water butt. This position is ideal for all connections at 32 mm (1 1/4") or less.

Hole Cutter Selection - 32 mm

To fill the water butt with the recommended '3P Universal Filter Collector' select the 32 mm flat bit from the set provided. This is the second smallest available in the set.

Drilling

Offer the drill to the marked point, proceed to drill the hole at 32 mm (or at your selected holes size for your connection set.) Check and re-check you are going to drill the correct size of hole for the connection set that you are using.

Attaching a Back-Nut & Hose Tail

A back nut and rubber seal can be fitted as shown. Hold the back nut and rubber seal in position and screw in the hose tail.

Hose tail in Position

This picture shows a 1" BSP thread - 32 mm hose tail in position (within a 32 mm drilled hole).

3. Connecting the Tap

With the 3/4" plastic high flow tap provided in the kit. Screw the tap into the 3/4" BSP connection thread. Use PTFE tape, if necessary, when installing the tap for extra protection and to make sure it sits in the correct position.

4. Winter Time

The Helena must be drained completely and disconnected from the rain water inlet, during freezing weather conditions.

